


ASSEMBLY INSTRUCTIONS FOR YOUR “KINETIC” WALL SWINGER

IMPORTANT SAFETY INSTRUCTIONS:

- *These instructions are provided for your safety. It is important that they are read completely before beginning installation of fixture.
- *WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.
- *Turn off power at switch before replacing bulbs, making sure fixture has had sufficient time to cool down.
- *This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce risk of electric shock, this plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. DO NOT ALTER THE PLUG.

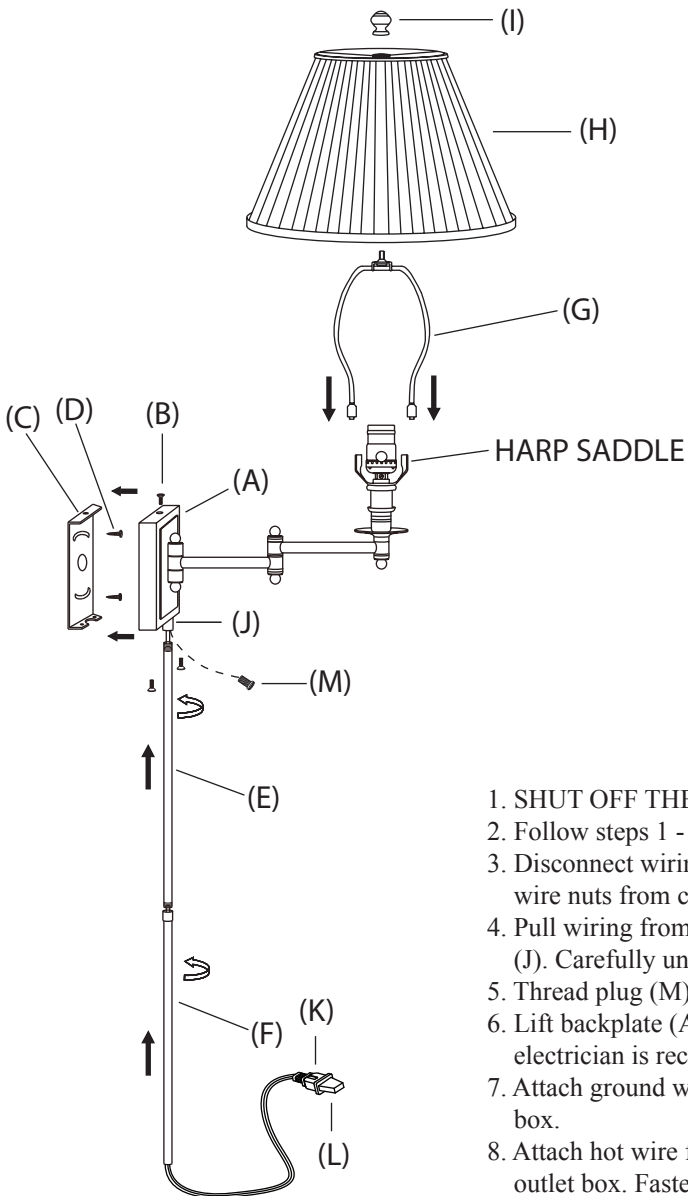

CORD COVER ASSEMBLY INSTRUCTIONS

1. Remove all parts from carton. Do not throw away any parts.
2. Remove mounting plate (C) from backplate (A) by removing backplate screws (B).
3. Affix mounting plate (C) to the wall using mounting plate screws (D), provided.
4. Slide backplate (A) over mounting plate (C). Align holes in backplate (A) with holes in mounting plate (C). Thread backplate screws (B) into backplate (A) and mounting plate (C) to secure fixture to wall.
5. Thread top cord cover (E) into the threaded opening of nipple (J). Thread bottom cord cover (F) into threaded opening of top cord cover (E).
6. Remove finial (I) from harp (G). Squeeze harp (G) inward and place into the opening of harp saddle.
7. Install one (1) 150W max. Type A, medium base bulb into socket.
8. Slide center ring of shade spider (located inside shade (H)) over threaded nipple on harp (G).
9. Screw finial (I) onto threaded nipple on harp (G) to secure shade to lamp.
10. Remove protective plastic (L) from polarized plug (K). Insert polarized plug (K) into wall outlet.

DIRECT WIRE ASSEMBLY INSTRUCTIONS

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY AT CIRCUIT BREAKER.
2. Follow steps 1 - 3 from *cord cover assembly instructions* above.
3. Disconnect wiring between socket and cord with polarized plug (K) by removing wire nuts from connections behind backplate (A).
4. Pull wiring from polarized plug (K) away from backplate (A), exiting through nipple (J). Carefully unscrew nipple (J) from backplate (A).
5. Thread plug (M) into hole in backplate (A) vacated by electrical cord and nipple (J).
6. Lift backplate (A) to outlet box and make proper electrical connection. A licensed electrician is recommended.
7. Attach ground wire from fixture (green or copper in color) to ground wire from outlet box.
8. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut and tightly wrap connection with electrical tape.
9. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (E) and tightly wrap connection with electrical tape.
10. Follow steps 6 - 9 from *cord cover assembly instructions* above to complete assembly.

* To clean use a soft, dry cloth ONLY. Do not use chemical or abrasive cleaners as they can damage the finish. *